

Registered Office: He-Man Works, Cable St, Southampton, Hampshire, SO14 5AR

Company Registration: 255130 England VAT Registration: 844275123

Tel 023 8022 6952

He-ManDualControls.co.uk

KPH to MPH Switching

To switch the speedo between **KPH & MPH** press the **star** button **once** then press the **up or down arrows** to select the speed unit. Once you have selected either **KPH or MPH** just leave the unit to go back to standard display mode.

Figure 'A'



Adjusting the unit to match the vehicles speedometer *(Displayed speed value adjustment)*

Press the **star** button **twice** to enter the speed value adjustment mode. To adjust the unit to match the vehicles speedometer use the **up or down arrows**.

See Figure 'A'.

If the speedo is new it will start reading at '0' & usually adjusting the speedometer up just **2 Units** is enough for most vehicles

(2 upside down does look like a 5 on the unit).

See Figure 'B'.

This procedure has to be done fairly quickly otherwise to speedo returns back to standard mode display.

Once adjusted the speedometer will retain its settings.

Figure 'B'



Speedo adjusted up by 2 units to match the cars speedometer

Ensure to adjust your speedometer with the vehicle static for your own safety, it is not necessary or safe to try to attempt to adjust the speedometer with the vehicle moving.